 
6-Key RF Remote Controller

Model No.: RM1/RM2

1 zone dimming/6-key/Wireless remote 30m distance/CR2032 battery





1 Zone CCT

CE RoHS and LVD RED

Features

- Apply to single color or dual color LED controller.
- Each remote can match one or more receiver.
- CR2032 battery powered.
- Operate with LED indicator light.

— 47.00 mm —

Mechanical Structures and Installations



Note: Before the first use, please remove the protective film on the battery.

Technical Parameters

Input and Output	
Output signal	RF(2.4GHz)
Working voltage	3VDC(CR2032)
Working current	< 5 m A
Standby current	< 2µA
Standby time	2 years
Remote distance	30m(Barrier-free space)

IP20

Ta: -30°C ~ +55°C

ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
EN 62368-1:2020+A11:2020
ETSI EN 300 328 V2.2.2
CE,EMC,IVD,RED

Warranty	
Warranty	5 years

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

8.00 mm

Use the controller's Match key

Match:

Short press match key, immediately press on/off key on the remote. The LED indicator fast flash a few times means match is successful.

Delete:

Press and hold match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

Use Power Restart

Match:

Switch off the power, then switch on power, repeat again. Immediately short press on/off key 3 times on the remote. The light blinks 3 times means match is successful.


Delete:

Switch off the power, then switch on power, repeat again. Immediately short press on/off key 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

IP rating

Environment

Operation temperature

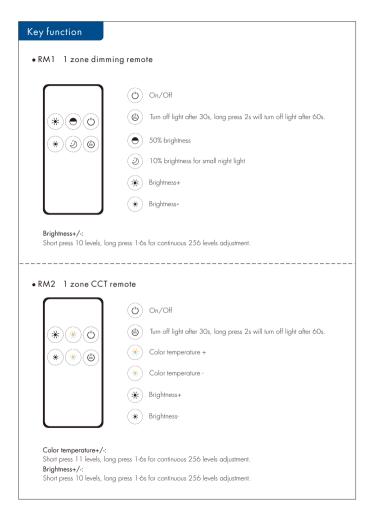

Safety information

- 1. Read all instructions carefully before you begin this installation.
- When installing battery, pay attention to the battery positive and negative polarity. A long time without the remote control, remove the battery. When remote distance becomes smaller and insensitive, replace the battery.
- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.