Mi · Light[®]

FUT095 RGBW remote control with buttons FUT096 Touch screen RGBW remote control

Product Features

This manual describes two types of RGBW remote controls used for our RGBW product. Both of them have same functions but different design. Each remote control can control the led lights up to four different zones, change the color, dim/brighten the lights, warm/cool white, different programs. In this manual.

Technical Parameters

Product Name: RGBW remote control with buttons Model No.: FUT095

Voltage: 3V(AAA * 2PCS)

Transmission Frequency: 2.4GHz Modulation Method: GFSK

Transmitting Power: 6dBm Standby Power Consumption: 20uA

Control Distance: 30m

Size: 52.5*21*120mm



Product Name: Touch screen RGBW remote control

Model No : FUT096

Voltage: 3V(AAA * 2PCS)

Transmission Frequency: 2.4GHz Modulation Method: GFSK

Transmitting Power: 6dBm

Standby Power Consumption: 20uA

Control Distance: 30m


Size: 52.5*21*120mm



Products Key Diagram

Remark: Hold "1" to get white mode. Under white mode, press 'S-' to get warm white, press 'S+' to get cool white. Under color mode, press 'S+/S-' for saturation control. When press 'M', S+/S- can adjust the speed of the dynamic modes.


To dim all RGBW lights at once or change the color, frist press "Master ON". to do this with individual lights, frist press "Zone ON". secondly, choose the color or brightness according to the color ring or brightness ring.

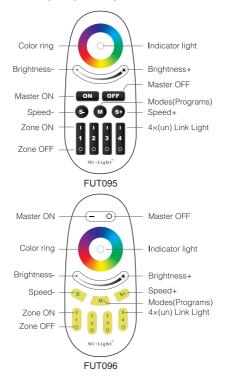

Linking&Unlinking

Remark: The light can be working after linking with the remote controller.

Linking Instructions

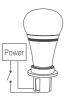





When the light on, short press any zone of '11' 1 time within 3 seconds




The light blink 3 times slowly means the linking is done successfully.



If the light not blink slowly, the linking failed, PIs switch off the light again, and follow the above steps again.

Unlinking Instructions

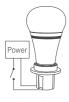












The light blinking 10 times quickly, means the unlinking successfully.




If the light not blink quickly, the unlink failed, pls switch off the light again, and follow the above steps to unlink again.

Grouping of several lights

You can add an endless numbers of lights to a zone on the 4 channel remote by linking the lights to different zones. This way you are completely flexible in creating different group combinations. Below you can see some grouping examples.

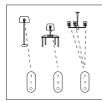

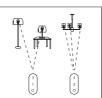



Remark:

- The user can re-programme freely as needed. One remote can control countless lamps or controllers, but one lamp or controller can only be controlled by four remotes (Max).
- Please check the battery installation and controller (totally discharge the power), when you programme after switching off and switching on.

Attention

- This remote controller only control specified Mi-Light products; not all Mi-Light series can work on this remote controller.
- 2. In the using of the remote, if the indicated lamp blinking quickly, pls change the battery in time. Pls don't use poor quality battery to avoid the leaking of battery liquid to damage the remote controller.
- 3. Please keep your finger off the touch ring when installing the batteries, to improve its sensitivity, and use the remote (3 seconds later) after the batteries are installed. Please reinstall the batteries, if the fouch ring is found low-sensitivity.
- 4. This 2.4GHz remote control system is precise electronic product; don't use it in humid, high temperature, dust and high voltage environment; Saving it at indoor, dry and no static electricity environment.
- Pls don't use the remote controller on the wide-range metal or strong electromagnetic wave area, otherwise, it will badly affect the controlling distance.

